

# HST-R SERIES ROOM TEMPERATURE SENSORS

Honeywell HST-R series room temperature sensors are applied to measure the room air temperature of HVAC system.


The HST-R series room temperature sensors have a variety of control signal outputs and can be compatible with a variety of automatic control systems.



## Basic Parameter

Measuring Temp. Range	-10 °C ~ 60 °C	
Working Environment	-15~60°C 0~95%RH (Non-condensation)	
Power Supply	0-10V	24 VDC/24VAC±20%
	4-20mA	24 VDC ±20%
IP Rated	IP30	
Wire conduct Diameter	0.33~1.65mm <sup>2</sup>	
Storage Temp.	-30 ~ 70 °C	
Housing Material	PC+ABS (Fire rating:UL94-V0)	
Certification	EN IEC 61000-6-3:2021 EN IEC 61000-6-2:2019 EN IEC 60730-1:2016+A1 EN IEC 60730-2-9:2019+A1	

## DEFINITION

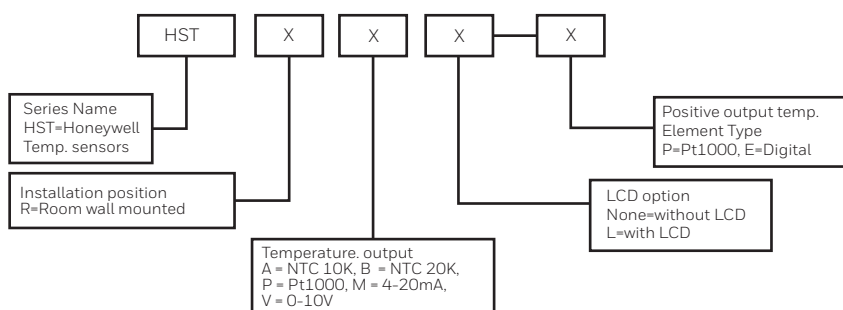

## ORDER INFORMATION AND TECHNICAL SPECIFICATION

SKU	Temp. Output	Temp.Sensor element type	Temp. Accuracy*	LCD
HST-RA	Resistance Value	10K NTC	0.3K @ 25°C	NO
HST-RB	Resistance Value	20K NTC	0.3K @ 25°C	NO
HST-RP	Resistance Value	PT1000	0.2K @ 25°C	NO
HST-RM-P	4~20mA	PT1000	0.3K @ 25°C	NO
HST-RM-E	4~20mA	Digital**	0.3K @ 25°C	NO
HST-RML-P	4~20mA	PT1000	0.3K @ 25°C	YES
HST-RML-E	4~20mA	Digital	0.3K @ 25°C	YES
HST-RV-P	0-10V	PT1000	0.3K @ 25°C	NO
HST-RV-E	0-10V	Digital	0.3K @ 25°C	NO
HST-RV-E	0-10V	PT1000	0.3K @ 25°C	YES
HST-RVL-E	0-10V	PT1Digital000	0.3K @ 25°C	YES


\*1. For the passive output type sensors, the temperature accuracy is the sensing element temperature accuracy. For the current and voltage signal output type sensors, the temperature accuracy is the transmitter accuracy when the power supply is 24VDC.

\*2. The temperature accuracy in the table above is the accuracy of the specified temperature point.

\*\* Temperature sensor element type is Digital refers to the sensor type is PN junction type digital temperature sensing element, Digital is for short.

## TEMPERATURE RANGE SETTING AND WIRING DIAGRAMS


### 1. MEASURE TEMPERATURE RANGE SETTING (ONLY FOR 0-10V AND 4-20mA OUTPUT)

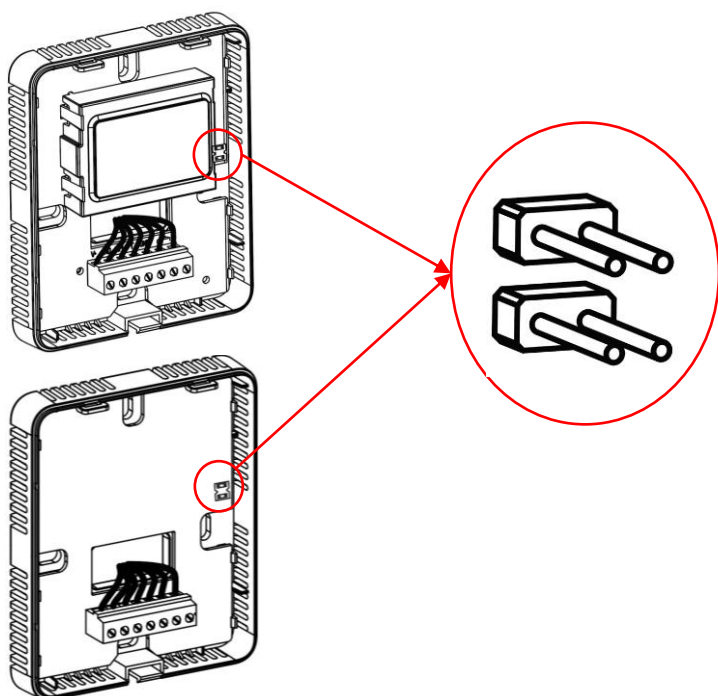


Jumper	Temp. Range
	-10°C ~ 60°C (default)
	0°C ~ 50°C
	0°C ~ 40°C

2. WIRING DIAGRAMS : WIRING ACCORDING TO THE WIRING DIAGRAM CORRESPONDING TO THE MODEL.


SKU
HST-DA
HST-DB
HST-DP



SKU
HST-RM-P
HST-RM-E
HST-RML-P
HST-RML-E



SKU
HST-RV-P
HST-RV-E
HST-RVL-P
HST-RVL-E


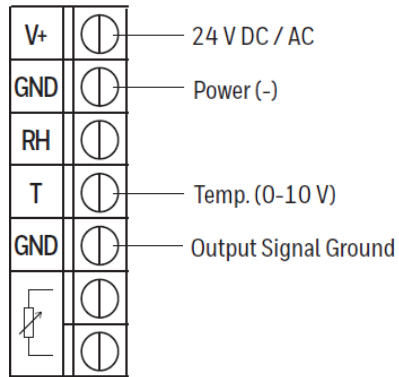


- Tips:
1. Connection terminals are suitable for AWG15~22.
  2. Due to the influence of wire resistance, the length of the cable between the sensor and the controller will cause the temperature drift. The details are as follows.

SKU	Permissible cable length	PT1000 Temp. drift every 10 meters cable	NTC10K / NTC20K Temperature shift
AWG 22	50m	0.272K	Negotiable
AWG 20	150m	0.173K	
AWG 18	150m	0.109K	
AWG 17	150m	0.086K	
AWG 16	300m	0.069K	
AWG 15	300m	0.054K	

## DIMENSION

Unit: mm

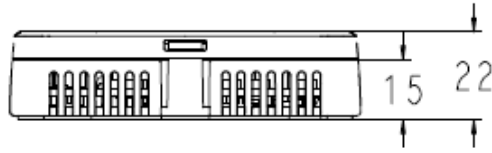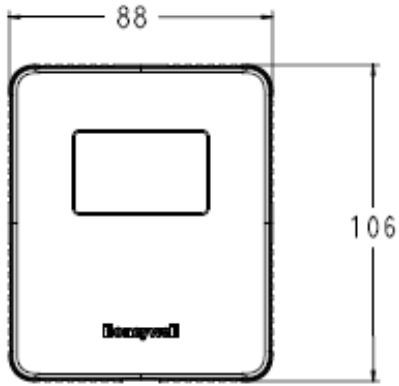

For more information,  
<https://honeywellbuildings.in>  
Call: 1-800-103-0339  
Email: BuildingAutomation.BMSIndia@honeywell.com

**Honeywell Building Automation**  
Unitech Trade Center, 5<sup>th</sup> Floor, Sector-43,  
Block C, Sushant Lok Phase - I,  
Gurgaon - 122 002

[www.honeywell.com](http://www.honeywell.com)

**Honeywell**