

B300-4-IS

4" Plug-in Detector Bases

3825 Ohio Avenue, St. Charles, Illinois 60174
 1-800-SENSOR2, FAX: 630-377-6495
 www.systemsensor.com/www.systemsensor.ca

SPECIFICATIONS

| | |
|--------------------------------------------------------|--------------------------------------------------------|
| Base Diameter: | 4.0" (10.2 cm) |
| Base Height: | 0.74" (18.8 mm) |
| Operating Temperature: | Refer to applicable sensor Operating Temperature Range |
| Electrical Ratings – includes base and detector | |
| Operating Voltage: | 15 to 32 VDC |
| Standby Current: | 150 µA |
| Listings: | UL 268, CAN/ULC S529 |

BEFORE INSTALLING

Please read the *System Smoke Detectors Application Guide*, which provides detailed information on detector spacing, placement, zoning, wiring, and special applications. Copies of this application guide are available from System Sensor. Observe guidelines for NFPA 72 or CAN/ULC S524 (depending on location).

NOTICE: This manual should be left with the owner/user of this equipment.

IMPORTANT: Use only with compatible UL/ULC-listed detector heads for proper system function. The detector used with this base must be tested and maintained regularly following requirements of NFPA 72 or CAN/ULC S536 (depending on location). The detector should be cleaned at least once a year.

IMPORTANT: Utiliser uniquement avec des détecteurs homologuées UL/ULC pour le bon fonctionnement du système. Le détecteur utilisé avec cette base doit être testé et entretenu régulièrement en conformité avec les exigences de la norme CAN/ULC S536. Le détecteur doit être nettoyé au moins une fois par an.


GENERAL DESCRIPTION

B300-4-IS is a plug in detector base intended for use in an intelligent system with screw terminals provided for power (+ and -), and remote annunciator connections. Communication takes place over the power lines (+ and -). This model also includes positive (+) side isolation on the Signaling Line Circuit (SLC) and must be used in conjunction with an isolation detector. The isolator base incorporates a shorting spring that allows the SLC to maintain power without a detector head installed. When an isolator detector head is installed, the shorting spring is displaced and the detector itself maintains that circuit.

BASE TERMINALS

| No. | Function |
|-----|----------------------------------------------------|
| 1 | Power (-), Remote Annunciator (-) |
| 2 | Power (+) out to next device |
| 3 | Power (+) in from control panel or previous device |
| 4 | Remote Annunciator (+) |

FIGURE 1. TERMINAL LAYOUT

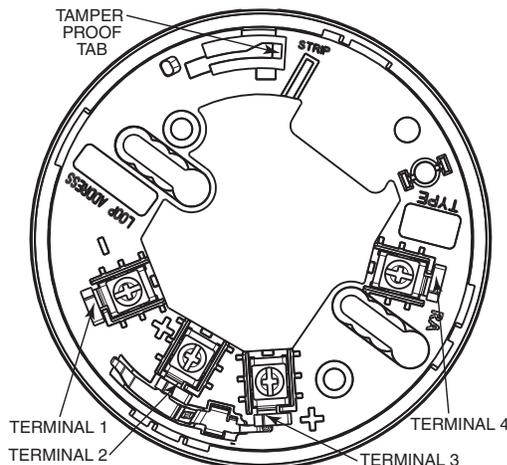

MOUNTING

This detector base mounts directly to 4" square with plaster ring, 3 1/2" octagon, 50 mm, 60 mm, and 70 mm centers.

INSTALLATION AND WIRING GUIDELINES (SEE FIGURE 2)

All wiring must be installed in compliance with all applicable local codes and any special requirements of the local authority having jurisdiction. Proper wire gauges should be used. The conductors used to connect smoke detectors to control panels and accessory devices should be color-coded to reduce the likelihood of wiring errors. Improper connections can prevent a system from responding properly in the event of a fire.

For signal wiring (the wiring between interconnected detectors and modules), it is recommended that the wiring be no smaller than 18 AWG (0.823 mm²). Wire sizes up to 12 AWG (3.31 mm²) may be used with the base.

Alarm system control panels have specifications for allowable loop resistance. Consult the control panel specifications for the total loop resistance allowed before wiring the detector loops.


Make wiring connections by stripping about 3/8" (10 mm) of insulation from the wire end (use strip gauge molded in base). Then slide the wire under the clamping plate and tighten the clamping plate screw. Do not loop the wire under the clamping plate. (See Figure 3.)

Check the zone wiring of all bases in the system before installing the detectors. This includes checking the wiring for continuity, correct polarity, ground fault testing and performing a dielectric test.

The base includes an area for recording the zone and address of detector to be installed at that location. This information is useful for setting the detector head address and for verification of the detector type required for that location.

Once all detector bases have been wired and mounted, and the loop wiring has been checked, the detector heads may be installed in the bases.


FIGURE 2. TYPICAL WIRING DIAGRAM

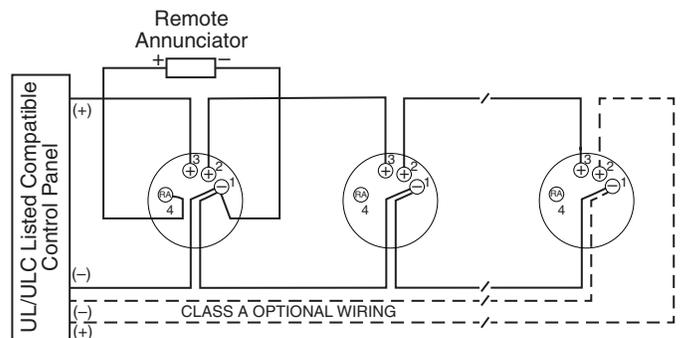

CAUTION: Do not loop wire under terminal 1 or 2. Break wire run to supervise connections.
MISE EN GARDE : Ne pas boucler le fil sous la borne 1 ou 2. Couper le fil pour assurer la supervision des connexions.


C2245-00

FIGURE 3. TERMINAL WIRE INSTALLATION

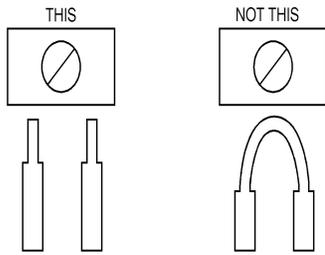

C0473-00

FIGURE 5. CONNECTION TO REMOTE ANNUNCIATOR TERMINAL

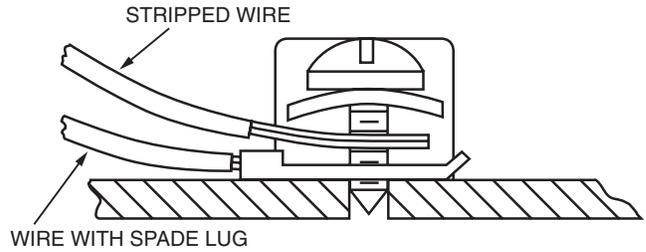


C0116-00

TAMPER RESISTANCE FEATURE


This detector base also includes an optional feature that, when activated, prevents anyone from removing the device without the use of a tool. To activate this feature, break off the tab on the lever of the detector base shown in Figure 4A before installing the detector. To remove the detector from the base after the tamper resistance feature has been activated, place a small-bladed screwdriver into the opening on the side of the base and push the plastic lever. (See Figure 4B.) This will allow the detector to be rotated counterclockwise for removal. The tamper resistance feature may be completely defeated by breaking and removing the plastic lever from the base; however, this prevents the feature from being used again.

FIGURE 4A. ACTIVATE TAMPER-RESISTANCE FEATURE

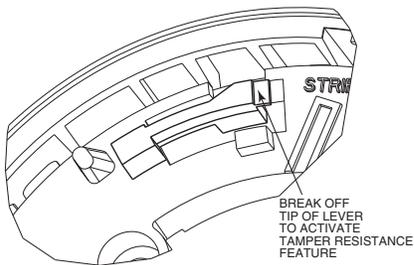

C2243-00

FIGURE 4B. DETECTOR REMOVAL

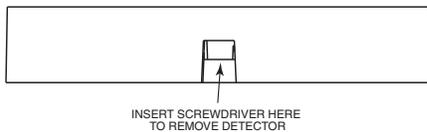

C2244-00

REMOTE ANNUNCIATOR (RA100Z/RA100ZA)

The remote annunciator is connected between terminals 1 and 4 using the spade lug terminal packed with the remote annunciator. The spade lug terminal is connected to the base terminal as shown in Figure 5.

It is not acceptable to have three stripped wires under the same wiring terminal unless they are separated by a washer or equivalent means. The spade lug supplied with the model RA100Z(A) is considered an equivalent means. See Figure 2 for proper installation.

Please refer to insert for the Limitations of Fire Alarm Systems

THREE-YEAR LIMITED WARRANTY

System Sensor warrants its enclosed smoke detector base to be free from defects in materials and workmanship under normal use and service for a period of three years from date of manufacture. System Sensor makes no other express warranty for this smoke detector base. No agent, representative, dealer, or employee of the Company has the authority to increase or alter the obligations or limitations of this Warranty. The Company's obligation of this Warranty shall be limited to the repair or replacement of any part of the smoke detector base which is found to be defective in materials or workmanship under normal use and service during the three year period commencing with the date of manufacture. After phoning System Sensor's toll free number 800-SENSOR2 (736-7672) for a Return Authorization number, send defective units postage prepaid to: Honeywell,

12220 Rojas Drive, Suite 700, El Paso TX 79936 USA. Please include a note describing the malfunction and suspected cause of failure. The Company shall not be obligated to repair or replace units which are found to be defective because of damage, unreasonable use, modifications, or alterations occurring after the date of manufacture. In no case shall the Company be liable for any consequential or incidental damages for breach of this or any other Warranty, expressed or implied whatsoever, even if the loss or damage is caused by the Company's negligence or fault. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.